



## Troubleshooting Guide:

- Is your robot plugged in?
- Is the volume turned all the way up on your computer?
- Did you hit the record button on the Edison Robot before clicking Program Edison?
- If you have tried #1-5 and your robot won't program correctly, try turning the volume DOWN by about 10%.
- Ask another student
- Check and Change 2 of the batteries
- Check and make sure the accessibility feature "mono audio" is turned off.
- Check the Resources Page (Scroll down to the FAQ section)

## More Resources:

**Lesson Plans:** <https://meetedison.com/robotics-lesson-plans/>

**Activities:** <https://meetedison.com/robot-activities/>

**Programming:** <https://meetedison.com/robot-programming-software/>

### What is Edison?

A programmable robot that teaches physical programming to students 4 - 16 years old

### Edison can:

- Respond to light and sound
- Follow lines and avoid obstacles
- Communicate with other Edison robots
- Connect to other Edison robots and LEGO bricks

**Edison has:** 4 coding languages: Barcodes, EdBlocks, EdScratch and EdPython