
HCMI Switch Panel Replacement

Use only the supplied lock nut and flat washer for the four corners



Reuse the 4 standoff's and mount them on the new Switch Panel

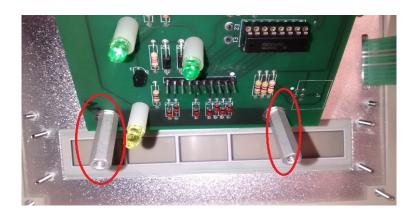




The nylon nuts are provided for the display so that circuit of the display is not shorted on the right side. On some older displays this was a problem.



The ribbon cable can plug in the correct direction and the wrong direction. If it's plugged in the wrong way it normally does not damage anything, you just won't have a working display.



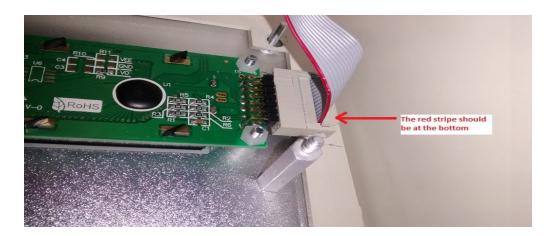

Make sure to plug the flat cable from the switch panel into this p.c. board, the ribbon cable into it's connector and the red and black wire into it's connector for the backlight, into this board.

