

# Dtex Battery Compartments


By Sven Stau

Some of the older units had a battery door on the side of the control box. One thing I noticed when re-installing the battery tray the contacts on the bottom of the tray's PC board would make contact with the control box. What would happen is some arcing of electrical power from the tray to the control box.



## THE FIX:

Attach a strip of electrical tape on the bottom of the battery tray.

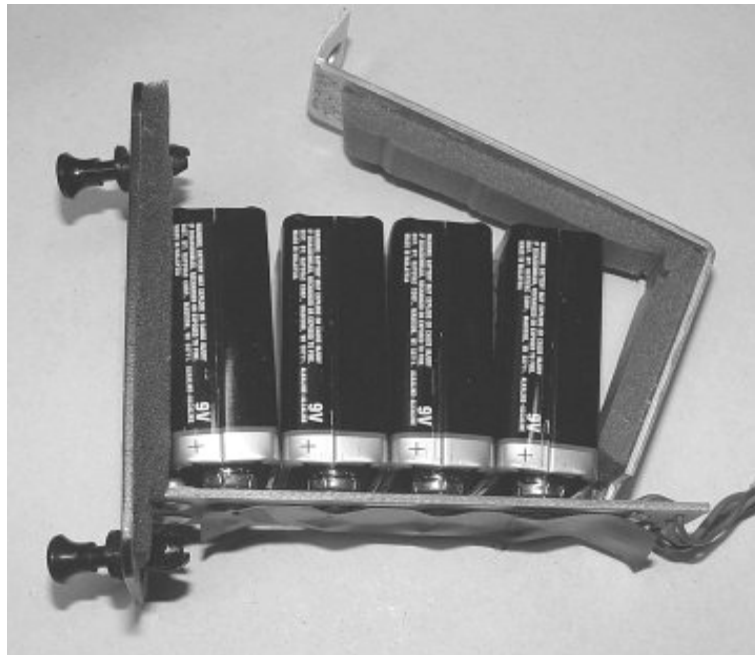

On the newer Dtex control box, the batteries door is now on the bottom edge of the detector. There is no longer a slide in tray. The batteries actually are snapped into the box. There is no longer an arcing problem.

